

JANOME BULLETIN

Free Motion Couching Foot Set

Pieces of work using yarn can be flowery and beautiful.

But sewing the yarn using the free motion method can be extremely hard work.

For times like this, try using the Free Motion Couching Foot Set developed by Janome!

Yarn can be sewn on easily by free motion stitching! Simple to use, and very functional, these feet can be used to expand the range of your sewing repertoire!

Compatible with Memory Craft Embroidery Machines
and High Shank Models

Needle thread: Monofilament transparent thread


Bobbin thread: Span polyester sewing thread #60

Stitch pattern : Zig-zag Stitch

Stitch width : 1.5mm or less

Foot 1 : for 1.5-2.0mm thick yarn

Foot 2 : for less than 1.5mm thick yarn

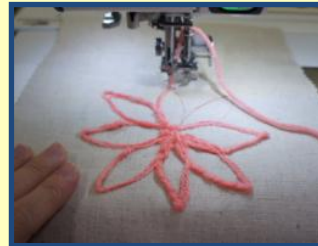

Part No.:202-110-006

*The yarn thicknesses listed above are only estimates.

Depending on the type of yarn, there may be occasions when the yarn cannot be sewn effectively.

Point1 Two Exchangeable Feet!

There are two types of foot which can be interchanged to match the thickness of the yarn. As a result, the feet are very easy to use, and beautiful patterns can be prepared! Also, the tip of the foot can be easily removed, allowing for it to be stored simply and compactly.



Foot1


Foot2



2mm yarn (Foot1)



2mm soft cord (Foot1)

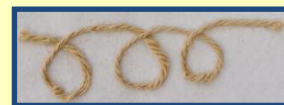

1.5mm hemp cord (Foot1)



1.0mm yarn (Foot2)

Point2 Zig-zag Stitch!

The Janome free motion couching foot has been designed to allow yarn to be sewn on with subtle zig-zag. In this way, it's difficult for the yarn to separate from the sewing thread!

Point3 Various Usage Methods!


Stick the yarn on and sew together. By fluffing up the yarn by brushing it (the brush from the "Janome Brush Out Embroidery Kit" can be used for this), you can create a fluffy, standout design. It's also possible to fill in patterns quicker than when embroidering.

Point4 Tips for Beautiful Sewing!

By laying the yarn out loosely on the work area, it becomes easier to feed and won't stretch or tangle (see the photo below).



Option
Part No.:830-472-004

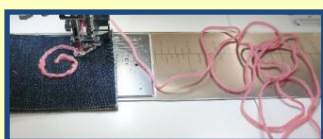

Work area



2013/9/11
JTM-1021

JANOME